

Bipolar Driver for 2-Phase Stepper Motors

Driver for 5-Phase Stepper Motors

CVD Series

RS-485 Communication Type

Pulse Input Type



Bipolar Drivers for 1.8°/0.9° Stepper Motors

Drivers for 0.36°/0.72° Stepper Motors

CVD Series RS-485 Communication Type

Product Number

CVD 2 B R - K R

① ② ③ ④ ⑤ ⑥

①	Series Name	CVD: CVD Series
②	Motor	2: 1.8°/0.9° Stepper Motor 5: 0.72°/0.36° Stepper Motor
③	Driver Type	B: With Installation Plate
④	Connector Type	R: Right Angle
⑤	Power Supply Input	K: DC Power Supply
⑥	Driver Type	R: RS-485 Communication Type

Product Line

Connector cable sets are available for the motor, power supply, I/O signals, and RS-485 communication (sold separately). The connectors are pre-crimped, making them easy to wire without crimp tools. For details, refer to page 2.

● Bipolar Driver for 1.8°/0.9° Stepper Motors

◇ Right Angle Type with Installation Plate

Product Name
CVD2BR-KR

◇ With Installation Plate

Product Name
CVD2B-KR

● Driver for 0.72°/0.36° Stepper Motors

◇ Right Angle Type with Installation Plate

Product Name
CVD5BR-KR

◇ With Installation Plate

Product Name
CVD5B-KR

Included

Type	Operating Manual
Common to all types	1 set

Specifications



Driver Product Name		CVD2B□-KR	CVD5B□-KR
Driving Method		Microstep Drive, Bipolar, Constant Current Drive Method	
Power Supply Voltage		24 VDC ± 10%	
Rated Current*		0.5 to 3.0	0.6 to 3.0
Interface	Direct Inputs	7, Photo-Coupler	
	Direct outputs	2, Photo-Coupler and Open-Collector	
	Communication	RS-485 (Modbus RTU)	
Operating Environment (In operation)	Ambient Temperature	0 to +50°C (Non-freezing)	
	Ambient Humidity	85% or less (Non-condensing)	
	Surrounding Atmosphere	No corrosive gas or dust. The product should not be exposed to water, oil or other liquids	

● For the right angle type with an installation plate, a code **R** (right angle) indicating the connector configuration is entered where the box □ is located within the driver product name.

*The input current value differs depending on the motor used together with the driver.

Refer to page 6.

RS-485 Communication Specifications

Electrical Characteristics	EIA-485 Based Use a shielded twisted pair cable, and keep the total wiring distance including extension to 10 m or less.
Communication Mode	Half duplex, asynchronous communication (data: 8 bits, stop bit: 1 bit or 2 bits, parity: none, even or odd)
Transmission Rate	Select either from 9600 bps, 19200 bps, 38400 bps, 57600 bps, 115200 bps, or 230400 bps.
Protocol	Modbus RTU Mode
Connection Units	Up to 31 drivers can be connected to a single host controller.

Dimensions (Unit: mm)

Right Angle Type with Installation Plate

Product Name	Mass [kg]
CVD2BR-KR	0.065
CVD5BR-KR	

● Applicable Connectors

Power Connector (CN1)

Connector Housing: 43645-0200 (Molex)
Contact: 43030-0001 (Molex)

Motor Connector (CN2)

Connector Housing: 51103-0500 (Molex)
Contact: 50351-8100 (Molex)

RS-485 Communication Connectors (CN4, CN5)

Connector Housing: PAP-03V-S (J.S.T. Mfg Co., Ltd.)
Contact: SPHD-001T-P0.5 or SPHD-002T-P0.5 (J.S.T. Mfg Co., Ltd.)

I/O Signal Connector (CN6)


Connector Housing: PHDR-12VS (J.S.T. Mfg Co., Ltd.)
Contact: SPHD-001T-P0.5 (J.S.T. Mfg Co., Ltd.)

With Installation Plate

Product Name	Mass [kg]
CVD2B-KR	0.065
CVD5B-KR	

● Applicable Connectors

Applicable connectors are the same as the right angle type with installation plate.

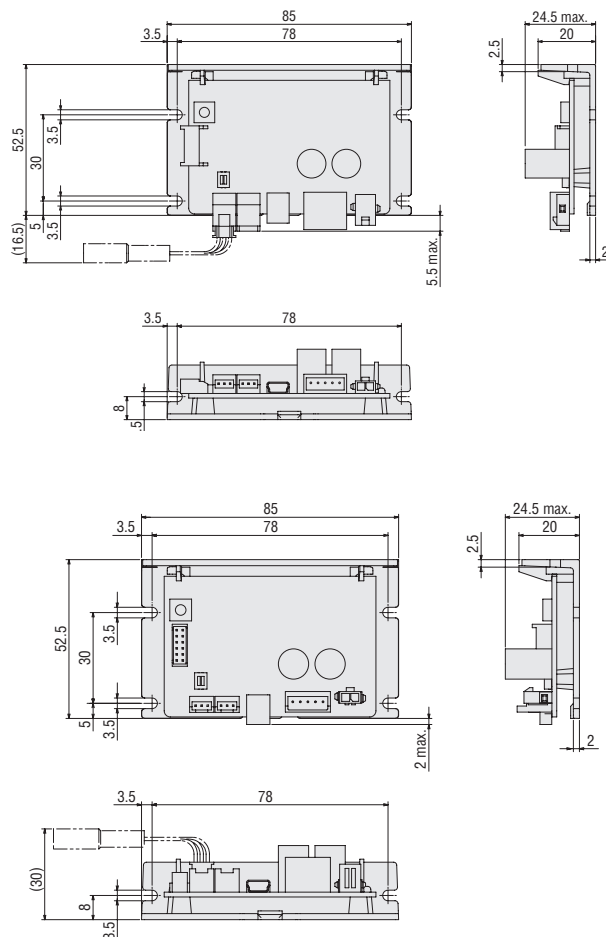

● Connector cable sets are available for the motor, power supply, I/O signals, and RS-485 communication (sold separately). The connectors pre-crimped, making them easy to wire without crimp tools.
For details, refer to page 6.

List of Applicable Motors

Driver for 1.8°/0.9° Stepper Motors

Driver Product Name		Rated Current	Input Current [A]	Applicable Motor
Right Angle Type with Installation Plate	With Installation Plate			
CVD2BR-KR	CVD2B-KR	0.5 A/Phase	0.5	PKP213D05 ☐
		0.6 A/Phase	0.5	PKP214D06 ☐
		0.85 A/Phase	0.8	PKP24 ☐ D08 ☐ 2
		1.4 A/Phase	1.3	PKP26 ☐ D14 ☐ 2
		1.5 A/Phase	1.9	PKP22 ☐ D15 ☐ 2 , PKP22 ☐ D15 ☐ 2 PKP23 ☐ D15 ☐ 2 , PKP262FD15A
			1.4	PKP24 ☐ D15 ☐ 2 , PKP24 ☐ MD15 ☐ 2
		2.3 A/Phase	2.0	PKP23 ☐ D23 ☐ 2 , PKP24 ☐ D23 ☐ 2
		2.8 A/Phase	3.0	PKP25 ☐ D28 ☐ A2 , PKP26 ☐ D28 ☐ 2 PKP26 ☐ MD28 ☐ 2

Driver for 0.72°/0.36° Stepper Motors

Driver Product Name		Rated Current	Input Current [A]	Applicable Motor
Right Angle Type with Installation Plate	With Installation Plate			
CVD5BR-KR	CVD5B-KR	0.35 A/Phase	0.6	PK513 , PK52 ☐ P
		0.75 A/Phase	1.4	PK52 ☐ H , PK54 ☐
		1.2 A/Phase	1.7	PKP52 ☐
		1.4 A/Phase	1.8	PK56 ☐
		1.8 A/Phase	2.8	PKP54 ☐ N18 ☐ 2 , PKP54 ☐ MN
		2.4 A/Phase	3.0	PKP56 ☐ FN24 ☐ 2 , PKP56 ☐ FMN

● A number indicating the length of the motor case is entered where the box ☐ is located within the names of the applicable motors.

● Either **A** (single shaft) or **B** (double shaft) indicating the configuration is specified where the box ☐ is located in the names of the applicable motors.

● Motors compatible with the driver are listed to easily distinguish motor and driver combinations.

Combinations with the encoder type and geared type are also available.

For details on the product name, please see the Oriental Motor website.

Note

● Keep the current setting of the driver to less than or equal to the rated current of the motor. If it exceeds the rated current of the motor, the product may be damaged.


Connection and Operation

Names and Functions of Driver Parts

1 Signal Monitor Indicators

◇ LED Indicator

Indication	Color	Function	Lighting Condition
PWR/ALM	Green	Power Supply Indication	When power is applied
	Red	Alarm Indication	When a protective function is activated (blinking)
C-DAT/C-ERR	Green	Communication Indication	When communication data is exchanged
	Red	Communication Error Indication	When a communication data error occurs

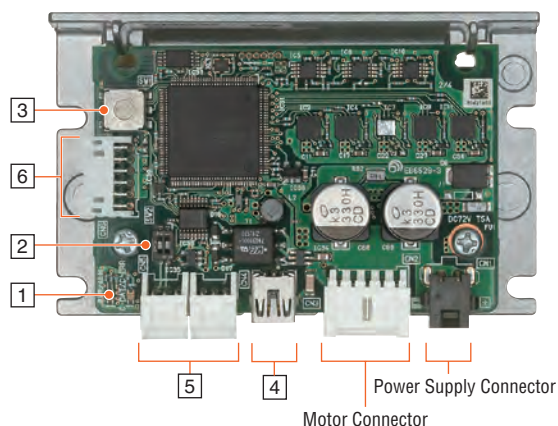

2 Terminating Resistor Setting Switch

Indication	No.	Function
SW2	1	Set the RS-485 communication termination resistor (120Ω) (Factory Setting: OFF) OFF: no termination resistor, ON: termination resistor connected.
	2	

3 Motor Setting Switch

Indication	Function
SW1	Sets the applicable motor (Factory Setting: 0)

4 USB Communication Connector (CN3)


◇ USB Communication Cable Specifications

Specification	USB 2.0 (Full Speed)
Cable	Length: 3 m or less
	Type: A to mini B

5 RS-485 Communication Connectors (CN4, CN5)


These connectors are used when controlled via RS-485 communication. Connect RS-485 communication cable (sold separately) to either CN4 or CN5 connector. Connect to another driver with the other connector.

Internal Input Circuit

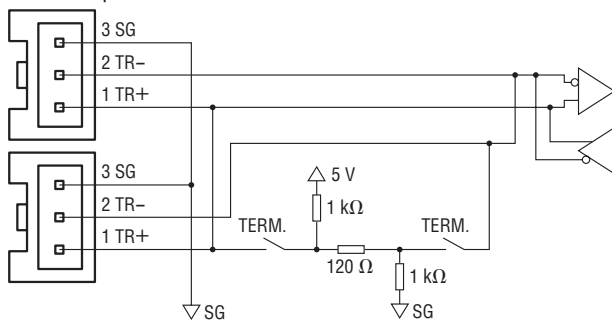

Pin No.	Signal Name	Function
1	TR +	RS-485 Communication Signal (+)
2	TR -	RS-485 Communication Signal (-)
3	SG	Signal GND

RS-485 Communication Cable

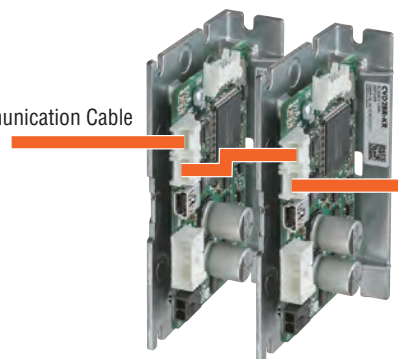


6 I/O Signal Connector (CN6)

Indication	Pin No.	Signal Name	Description
CN6	1	IN-COM	Input Common
	2	IN0	Control Input 0 [FW-POS] Execute continuous operation in the FWD direction.
	3	IN1	Control Input 1 [RV-POS] Execute continuous operation in the RVS direction.
	4	IN2	Control Input 2 [STOP] Stop the motor.
	5	IN3	Control Input 3 [ALM-RST] Alarm reset.
	6	IN4	Control Input 4 [HOMES] Input for mechanical home sensor.
	7	IN5	Control Input 5 [FW-LS] Input for a limit sensor in FWD direction.
	8	IN6	Control Input 6 [RV-LS] Input for a limit sensor in RVS direction.
	9	OUT0	Control Output 0 [ALM-B] Driver alarm status output (normally closed).
	10	OUT1	Control Output 1 [TIM] Output when the excitation state of the motor is step "0".
	11	OUT-COM	Output Common
	12	N.C.	N.C.


Connection Diagrams

◇ Connecting to a Current Sink Output Circuit

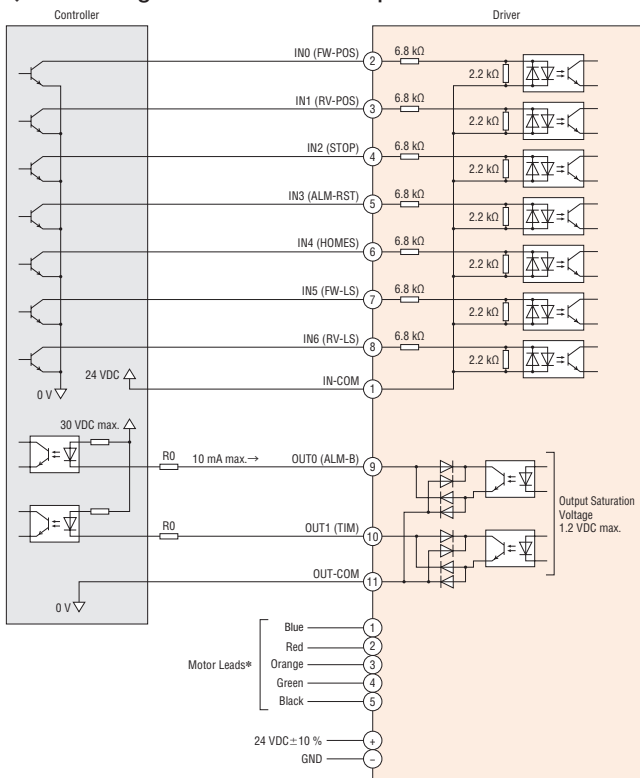

*The connector pin assignments vary depending on the motor. For details, refer to the connection table on page 5.

◇ Connecting to a Current Source Output Circuit

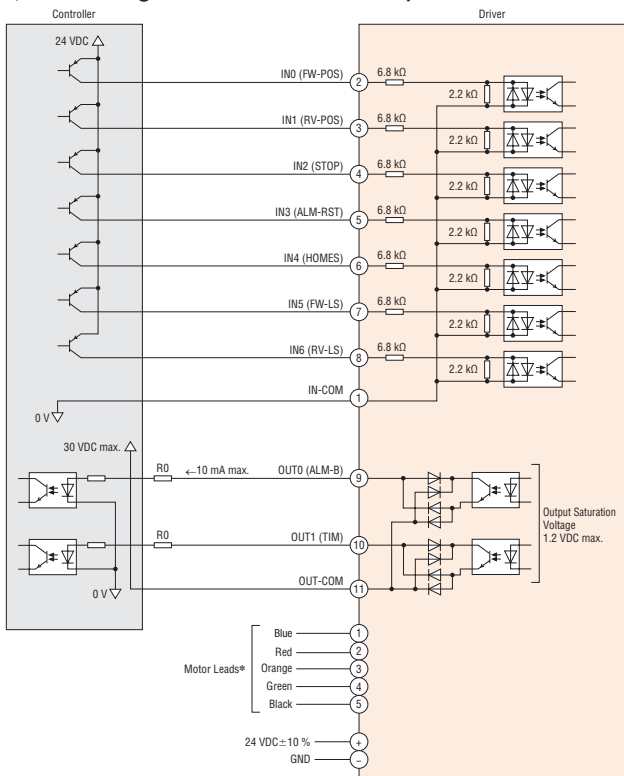

*The connector pin assignments vary depending on the motor. For details, refer to the connection table on page 5..

[Note on Wiring]

◆ I/O Signal Connection

- Use output signals at 30 VDC or less, 10 mA or less. When the current value exceeds 10 mA, connect an external resistor R0.
- For the I/O signals cable, using a twisted pair cable or a shielded cable is recommended.
- Keep the wiring distance as short as possible (less than 2 m) to limit the effect of noise.
- Provide a distance of 100 mm or more between the control I/O signal lines and power lines (power supply lines, motor lines and other large-current circuits).

◆ Power Supply Connection

- Reverse-polarity connection of DC power supply input may cause damage to the driver. When connecting, be sure to check the polarity of the power supply.

◆ Motor Connection


- Up to three cables can be used for the connection between the motor and driver.
- Keep 10 m or less for the wiring distance between the motor and driver.

◇ General

- A separate hand crimp tool is required to crimp the connector and lead wires included with the driver. Connection cables which are available as accessories (sold separately) have already had their lead wires crimped.
- If a specific wiring and layout causes the motor cable or power supply cable to generate a noise problem, shield the cable or use ferrite cores.

◇ Connection Table for 2-Phase CVD Driver

- Motor: 0.9°/1.8° PKP/PK Series Bipolar 4 Leads
- Driver: Bipolar Driver for 0.9°/1.8° Stepper Motors

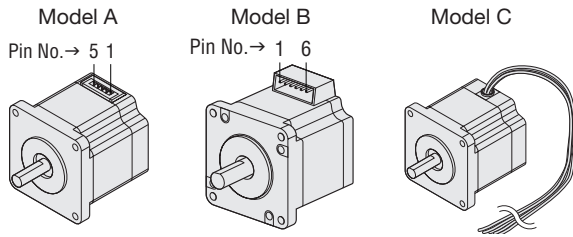

Driver CN2 Pin No.	Model A		Model B		Model C
	Pin No.	Color	Pin No.	Color	Color
1	4	Blue	1	Blue	Blue
2	5	Red	3	Red	Red
3	-	-	-	-	-
4	2	Green	6	Green	Green
5	1	Black	4	Black	Black


- The Colors in the table represent colors of the lead wires of the connection cables sold separately.

Note

- The motors shown in the model A and model B have different pin assignments. Incorrect connection will prevent the motor from operating correctly.

◇ Connection Table for 5-Phase CVD Driver


- Motor: 0.36°/0.72° PKP/PK Series
- Driver: Bipolar Driver for 0.36°/0.72° 0.36°/0.72° Stepper Motors

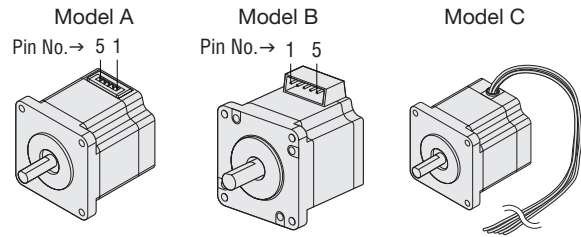

Driver CN2 Pin No.	Model A		Model B		Model C
	Pin No.	Color	Pin No.	Color	Color
1	5	Blue	1	Blue	Blue
2	4	Red	2	Red	Red
3	3	Orange	3	Orange	Orange
4	2	Green	4	Green	Green
5	1	Black	5	Black	Black

- The Colors in the table represent colors of the lead wires of the connection cables sold separately.

Power Supply Cable/I/O Signal Cable Set (for RS-485 Communication Type)

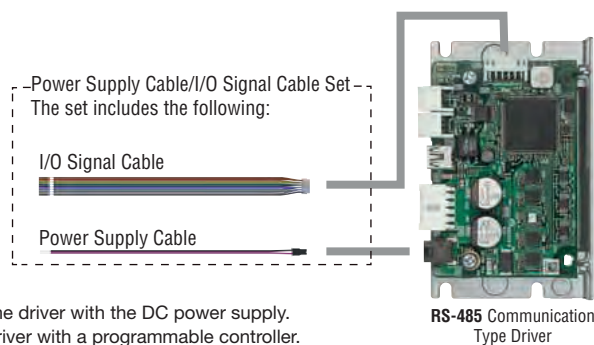


The power supply cable is for connecting the driver with the DC power supply.
The I/O signal cable is for connecting the driver with a programmable controller.
Power supply cable and I/O signal cable are coming as a set.

Product Line

Product Name	Length L [m]
LH5003CC	0.3
LH5010CC	1

Dimensions (Unit: mm)

 
Power Supply Cable



I/O Signal Cable



RS-485 Communication Cable (for RS-485 Communication Type)

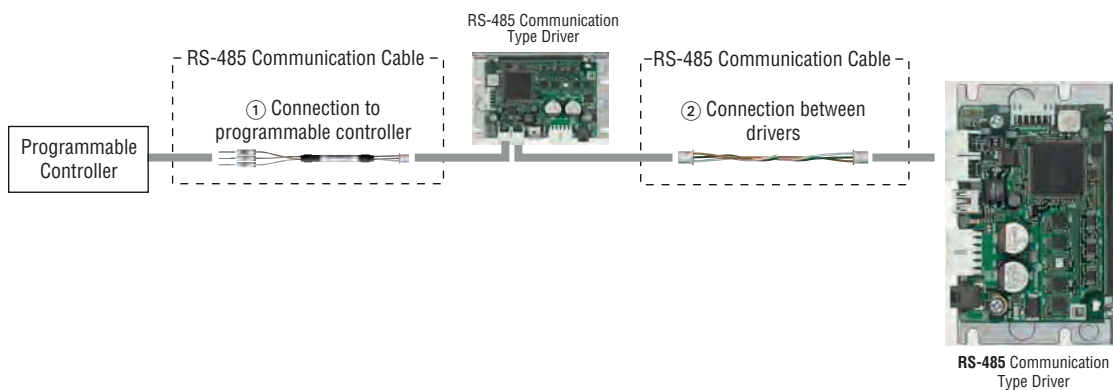


① For Connection to Programmable Controller
Cable for connection to a programmable controller.

Product Line

Product Name	Length L [m]
CC030-RS	3

Dimensions (Unit: mm)

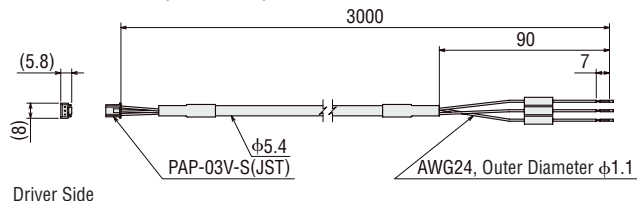


② For Connection between Drivers
Cable for connection between drivers.


Product Line

Product Name	Length L [m]
LH0015-RWN	0.15

Dimensions (Unit: mm)

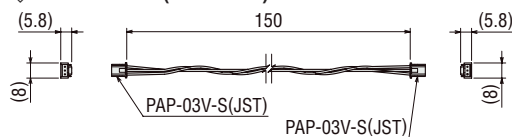

Bipolar Driver for 1.8°/0.9° Stepper Motors Unipolar Driver for 1.8°/0.9° Stepper Motors Driver for 0.72°/0.36° Stepper Motors CVD Series Pulse Input Type


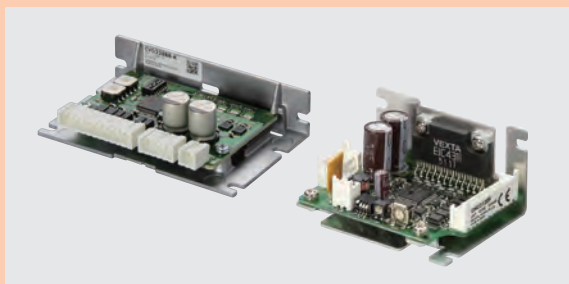


These are DC power supply input drivers for stepper motors. The bipolar/unipolar driver for 1.8°/0.9° stepper motor and the driver for 0.72°/0.36° stepper motor are available.

Using the microstep drive function for a low-vibration driver reduces vibration and noise.

Features and Types

● Bipolar/Unipolar Driver for 1.8°/0.9° Stepper Motor Driver for 0.72°/0.36° Stepper Motor

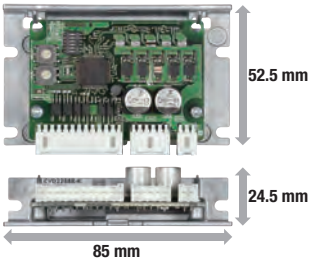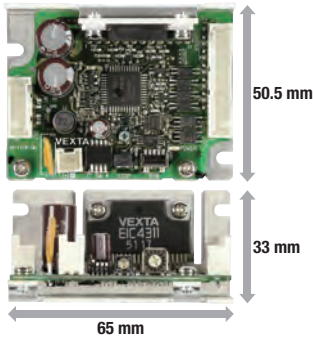Driver Type	External View	Introduction	Driver Installation Direction
● Bipolar Driver for 1.8°/0.9° Stepper Motor ● Driver for 0.72°/0.36° Stepper Motor  • Mass 20 g - 70 g (The value differs according to the driver type.) ● The driver cannot be shared by both a 1.8°/0.9° stepper motor and 0.72°/0.36° stepper motor. Each must use its respective dedicated driver.	Right Angle Type with Installation Plate  The connector points outward. With Installation Plate  The connector points upward. Without Installation Plate  The connector points upward.	• Compact and lightweight driver with a full-time microstep • Using the smooth drive function reduces the vibration and noise more than conventional products. • The driver is equipped with a protective function that enables you to find driver errors early. • Running current can be easily set with the digital switch.	• Horizontal direction installation • Vertical direction installation
● Unipolar Driver for 1.8°/0.9° Stepper Motor  • Mass 50g	The connector points upward. 	• Compact and lightweight driver with a microstep • Running current can be easily set with the digital switch.	

Bipolar Driver for 1.8°/0.9° Stepper Motor Driver for 0.72°/0.36° Stepper Motor CVD Series Pulse Input Type

Product Number

CVD 2 23 F B R - K

① ② ③ ④ ⑤ ⑥ ⑦

①	Driver Type	
②	2: 1.8°/0.9° Stepper Motor	5: 0.72°/0.36° Stepper Motor
③	Rated Current	
④	Driver Identification	
⑤	Driver Configuration	B : With Installation Plate Blank: Without Installation Plate
⑥	Connector Configuration	R : Right Angle
⑦	Power Supply Input	K : DC Power Supply

Product Line

● Bipolar Driver for 1.8°/0.9° Stepper Motor

◇ Right Angle Type with Installation Plate

Product Name
CVD205BR-K
CVD206BR-K
CVD215BR-K
CVD223BR-K
CVD223FBR-K
CVD228BR-K
CVD242BR-K
CVD245BR-K

◇ With Installation Plate

Product Name
CVD205B-K
CVD206B-K
CVD215B-K
CVD223B-K
CVD223FB-K
CVD228B-K
CVD242B-K
CVD245B-K

◇ Without Installation Plate

Product Name
CVD205-K
CVD206-K
CVD215-K
CVD223-K
CVD223F-K
CVD228-K

● Driver for 0.72°/0.36° Stepper Motor

◇ Right Angle Type with Installation Plate

Product Name
CVD503BR-K
CVD507BR-K
CVD512BR-K
CVD514BR-K
CVD518BR-K
CVD524BR-K
CVD528BR-K
CVD538BR-K

◇ With Installation Plate

Product Name
CVD503B-K
CVD507B-K
CVD512B-K
CVD514B-K
CVD518B-K
CVD524B-K
CVD528B-K
CVD538B-K

◇ Without Installation Plate

Product Name
CVD503-K
CVD507-K
CVD512-K
CVD514-K
CVD518-K
CVD524-K

Included

Type	Connector for Driver Connection	Operating manual
Common to All Types	For CN1 (1 Piece) For CN2 (1 Piece) For CN3 (1 Piece)	1 set

Specifications

● Bipolar Driver for 1.8°/0.9° Stepper Motor

Product Name	CVD205□□-K	CVD206□□-K	CVD215□□-K	CVD223□□-K CVD223F□□-K	CVD228□□-K	CVD242B□□-K	CVD245B□□-K
Drive Method	Microstep Drive, Bipolar Constant Current Drive Method						
Motor Drive Current (Factory setting)	0.5 A/Phase	0.6 A/Phase	1.5 A/Phase	2.3 A/Phase	2.8 A/Phase	4.2 A/Phase	4.5 A/Phase
Power Supply Voltage	24 VDC±10%						
Input Current A	0.5	0.5	1.3	2.0	3.0	3.6	3.9
Maximum Input Pulse Frequency	Line driver output by programmable controller: 1 MHz (When the pulse duty is 50%) Open-collector output by programmable controller: 250 kHz (When the pulse duty is 50%) Negative logic pulse input						
Operating Environment (In operation)	Ambient Temperature	0 - +50°C (Non-freezing)					
	Ambient Humidity	85% or Less (Non-condensing)					
	Atmosphere	No corrosive gases or dust. The product should not be exposed to water, oil or other liquids.					

- For the type with installation plate, **B** (with installation plate) indicating the diver configuration is specified where the box □ is located in the product name.
For the right angle type with installation plate, an **R** (right angle) indicating the connector configuration is specified where the box □ is located in the product name.

● Driver for 0.72°/0.36° Stepper Motor

Product Name	CVD503□□-K	CVD507□□-K	CVD512□□-K	CVD514□□-K	CVD518□□-K	CVD524B□□-K	CVD528B□□-K	CVD538B□□-K
Drive Method	Microstep Drive, Bipolar Constant Current Drive Method							
Motor Drive Current (Factory setting)	0.35 A/Phase	0.75 A/Phase	1.2 A/Phase	1.4 A/Phase	1.8 A/Phase	2.4 A/Phase	2.8 A/Phase	3.8 A/Phase
Power Supply Voltage	24 VDC±10%							
Input Current A	0.6	1.4	1.7	1.8	2.8	3.0	4.8	4.8
Maximum Input Pulse Frequency	Line driver output by programmable controller: 1 MHz (When the pulse duty is 50%) Open-collector output by programmable controller: 250 kHz (When the pulse duty is 50%) Negative logic pulse input							
Operating Environment (In operation)	Ambient Temperature	0 - +50°C (Non-freezing)						
	Ambient Humidity	85% or Less (Non-condensing)						
	Atmosphere	No corrosive gases or dust. The product should not be exposed to water, oil or other liquids.						

- For the type with installation plate, **B** (with installation plate) indicating the diver configuration is specified where the box □ is located in the product name.
For the right angle type with installation plate, an **R** (right angle) indicating the connector configuration is specified where the box □ is located in the product name.

Dimensions (Unit = mm)


Right Angle Type with Installation Plate

Product Name	Mass [kg]
CVD205BR-K	0.06
CVD206BR-K	
CVD215BR-K	
CVD223BR-K	
CVD223FBR-K	
CVD228BR-K	
CVD503BR-K	
CVD507BR-K	
CVD512BR-K	
CVD514BR-K	
CVD518BR-K	
CVD524BR-K	

● Included

Connector Housing: 51103-0200 (Molex)
51103-0500 (Molex)
51103-1200 (Molex)

Contact: 50351-8100 (Molex)

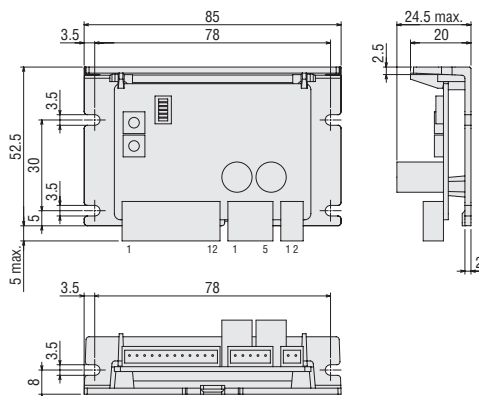


Product Name	Mass [kg]
CVD242BR-K	0.07
CVD245BR-K	
CVD528BR-K	
CVD538BR-K	

● Included

Connector Housing: 51067-0200 (Molex)
51067-0500 (Molex)
51103-1200 (Molex)

Contact: 50217-9101 (Molex)
50351-8100 (Molex)

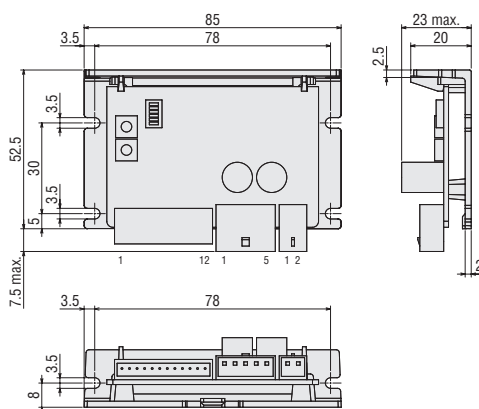


With Installation Plate

Product Name	Mass [kg]
CVD205B-K	0.06
CVD206B-K	
CVD215B-K	
CVD223B-K	
CVD223FB-K	
CVD228B-K	
CVD503B-K	
CVD507B-K	
CVD512B-K	
CVD514B-K	
CVD518B-K	
CVD524B-K	

● Included

Connector Housing: 51103-0200 (Molex)
51103-0500 (Molex)
51103-1200 (Molex)

Contact: 50351-8100 (Molex)

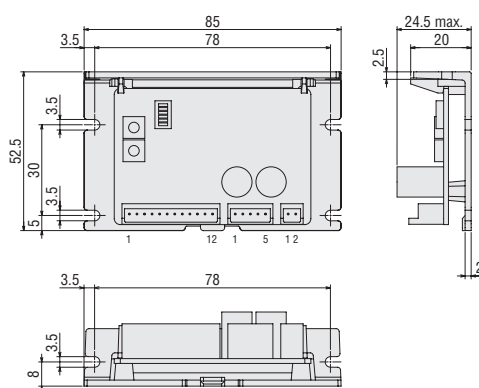


Product Name	Mass [kg]
CVD242B-K	0.07
CVD245B-K	
CVD528B-K	
CVD538B-K	

● Included


Connector Housing: 51067-0200 (Molex)
51067-0500 (Molex)
51103-1200 (Molex)

Contact: 50217-9101 (Molex)
50351-8100 (Molex)

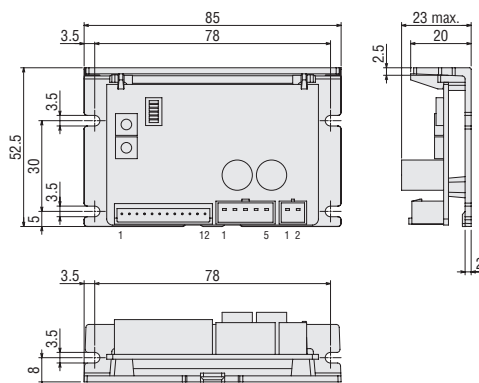

● Without Installation Plate

Product Name	Mass [kg]
CVD205-K	0.02
CVD206-K	
CVD215-K	
CVD223-K	
CVD223F-K	
CVD228-K	
CVD503-K	
CVD507-K	
CVD512-K	
CVD514-K	
CVD518-K	
CVD524-K	

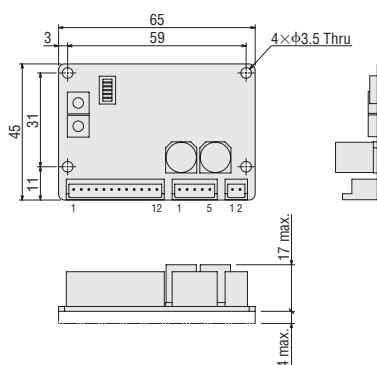

● Included

Connector Housing: 51103-0200 (Molex)

51103-0500 (Molex)

51103-1200 (Molex)

Contact: 50351-8100 (Molex)

■ List of Applicable Motors

● Bipolar Driver for 1.8°/0.9° Stepper Motor

Right Angle Type with Installation Plate	Driver Product Name		Motor Drive Current (Factory Setting)	Applicable Motor
	With Installation Plate	Without Installation Plate		
CVD205BR-K	CVD205B-K	CVD205-K	0.5 A/Phase	PKP213D
CVD206BR-K	CVD206B-K	CVD206-K	0.6 A/Phase	PKP214D
CVD215BR-K	CVD215B-K	CVD215-K	1.5 A/Phase	PKP22□D15, PKP23□D15, PKP24□MD15, PKP262FD
CVD223BR-K	CVD223B-K	CVD223-K	2.3 A/Phase	PKP23□D23
CVD223FBR-K	CVD223FB-K	CVD223F-K	2.3 A/Phase	PKP24□D15■2, PKP24□D23■2
CVD228BR-K	CVD228B-K	CVD228-K	2.8 A/Phase	PKP26□D14■2, PKP26□D28■2, PKP26□MD28
CVD242BR-K	CVD242B-K	—	4.2 A/Phase	PKP26□D42
CVD245BR-K	CVD245B-K	—	4.5 A/Phase	PKP29□D

● A number indicating the length of the motor case is entered where the box □ is located within the names of the applicable motors.

● Either **A** (single shaft) or **B** (double shaft) indicating the configuration is specified where the box ■ is located in the names of the applicable motors.

● The applicable motors are listed such that the available combinations with the driver are distinguishable.

Combinations with the encoder type and geared type are also available.

For details on the product name, please see the Oriental Motor website.

● Driver for 0.72°/0.36° Stepper Motor

Right Angle Type with Installation Plate	Driver Product Name		Motor Drive Current (Factory Setting)	Applicable Motor
	With Installation Plate	Without Installation Plate		
CVD503BR-K	CVD503B-K	CVD503-K	0.35 A/Phase	PK513
CVD507BR-K	CVD507B-K	CVD507-K	0.75 A/Phase	—
CVD512BR-K	CVD512B-K	CVD512-K	1.2 A/Phase	PKP52□
CVD514BR-K	CVD514B-K	CVD514-K	1.4 A/Phase	—
CVD518BR-K	CVD518B-K	CVD518-K	1.8 A/Phase	PKP54□
CVD524BR-K	CVD524B-K	CVD524-K	2.4 A/Phase	PKP56□FN24, PKP56□FMN
CVD528BR-K	CVD528B-K	—	2.8 A/Phase	PKP56□N28, PK59□H
CVD538BR-K	CVD538B-K	—	3.8 A/Phase	PKP56□FN38

● A number indicating the length of the motor case is entered where the box □ is located within the names of the applicable motors.

● The applicable motors are listed such that the available combinations with the driver are distinguishable.

Combinations with the encoder type and geared type are also available.

For details on the product name, please see the Oriental Motor website.

Connection and Operation (Bipolar Driver for 1.8°/0.9° Stepper Motor and Driver for 0.72°/0.36° Stepper Motor)

Names and Functions of Driver Parts


1 Signal Monitor Indicators

LED Indicator

Indication	Color	Function	Lighting Condition
PWR/ALM	Green	Power supply indication	When power is applied
	Red	Alarm indication	When a protective function is activated (blinking)

Alarm Contents


Blink Count	Function	Operating Condition
2	Overheat Protection	When the temperature of the driver board reaches 85°C
3	Overvoltage Protection	When the power supply voltage exceeds its permissible value When a large inertial load is stopped suddenly When a large load is hoisted
5	Overcurrent Protection	When an excessive current flows to the motor's output circuit
9	EEPROM error	When data of the driver is damaged
Lighting	CPU error	When the CPU driver malfunctions

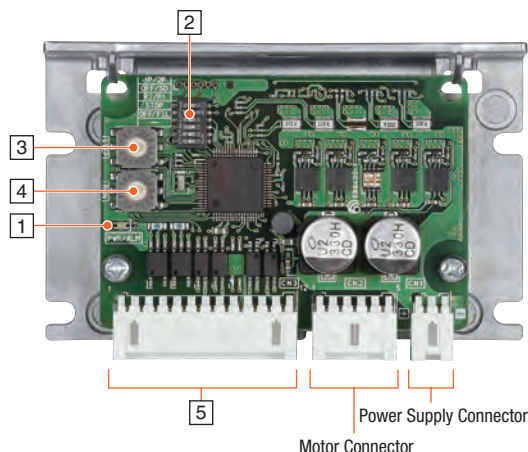

2 Function Setting Switch

Indication	No.	Function
1P/2P	1	Switches the pulse input mode between 1-pulse input mode and 2-pulse input mode.
OFF/SD	2	Switches the smooth drive function between enabled and disabled.
R2/R1	3	Use in combination with the step angle setting switch to set the step angle.
STOP	4	Switches the standstill current of motors to 25% or 50%.
OFF/FIL	5	Switches the command filter between enabled and disabled.
—	6	Not used.

● Difference in the Motor Responsiveness Depending on the Command Filter (OFF/FIL switch)

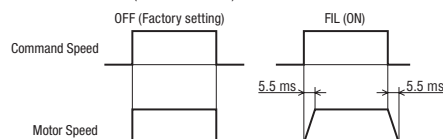

3 Step Angle Setting Switch

Indication	Function
STEP	Use in combination with the R2/R1 switch to set the step angle.

Step Angle Setting Switch (STEP) Scale	R2/R1 Switch: When Set to ON (R1)		R2/R1 Switch: When Set to OFF (R2)	
	Resolution (P/R)	Step Angle	Resolution (P/R)	Step Angle
0	500	0.72°	200	1.8°
1	1000	0.36°	400	0.9°
2	1250	0.288°	800	0.45°
3	2000	0.18°	1000	0.36°
4	2500	0.144°	1600	0.225°
5	4000	0.09°	2000	0.18°
6	5000	0.072°	3200	0.1125°
7	10000	0.036°	5000	0.072°
8	12500	0.0288°	6400	0.05625°
9	20000	0.018°	10000	0.036°
A	25000	0.0144°	12800	0.028125°
B	40000	0.009°	20000	0.018°
C	50000	0.0072°	25000	0.0144°
D	62500	0.00576°	25600	0.0140625°
E	100000	0.0036°	50000	0.0072°
F	125000	0.00288°	51200	0.00703125°

● Compared to the standard type, the high-resolution type has 2 times the resolution and 1/2 the step angle.

Example: When the R2/R1 switch is set to ON (R1) and the STEP switch is set to "0"

Resolution of High-Resolution Type: $500 \times 2 = 1000$

Step Angle of High-Resolution Type: $0.72^\circ / 2 = 0.36^\circ$

4 Running Current Setting Switch


Indication	Function
RUN	Sets the motor running current.

5 I/O Signal Connector

Indication	Pin No.	I/O	Signal Name	Function
CN3	1	Input	PLS+ (CW+)	Operation command pulse signal (Rotates the motor in the CW direction when in 2-pulse input mode.)
	2		PLS- (CW-)	
	3		DIR+ (CCW+)	Rotation direction signal (Rotates the motor in the CCW direction when in 2-pulse input mode.)
	4		DIR- (CCW-)	
	5		AWO+	Stop motor excitation.
	6		AWO-	
	7		CS+	Switches the step angle.
	8		CS-	
	9	Output	ALM+	Outputs the alarm status for the driver (normally closed).
	10		ALM-	
	11		TIM+	Output when the state of excitation of the motor is the excitation home position.
	12		TIM-	


■ Connection Diagram

- When the pulse input is the line driver

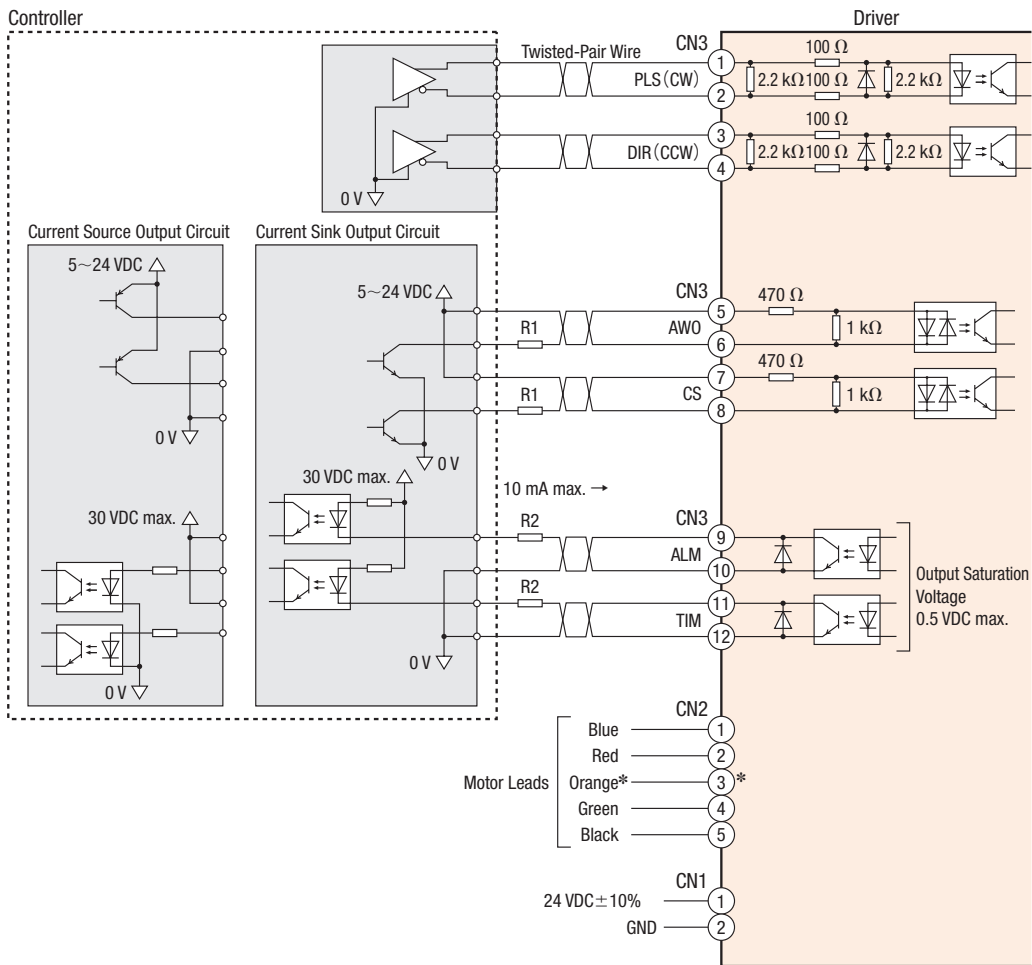

*This is not available for 1.8° Stepper Motor. Do not connect anything to pin No. 3.

- When the pulse input is open collector

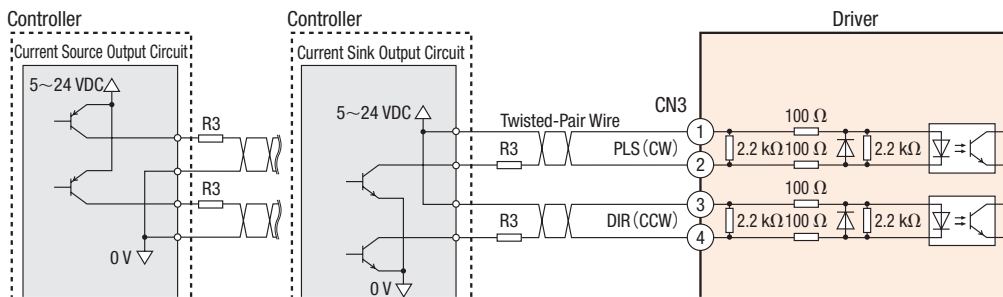

[Notes on Wiring]

◆ I/O Signal Connection

- **Input signal**
Use 5 VDC for the input signals.
If voltage exceeding 5 VDC is applied, connect an external resistor R1 so that the current becomes 5~15 mA. (AWO, CS)
If voltage exceeding 5 VDC is applied to CW input and CCW input when the pulse input is open collector, connect an external resistor R3 so that the current becomes 7~20 mA.
- **Output signal**
Use output signals at 30 VDC 10 mA max. When the current value exceeds 10 mA, connect an external resistor R2.
- Use twisted-pair cables of AWG24~22 (0.2~0.3 mm²).
- Note that as the length of the pulse line increases, the max. transmission frequency decreases, and keep the wiring length as short as possible (2 m max.).
- Provide a distance of 100 mm min. between the signal lines and power lines (such as power supply lines and motor lines).

◆ Power Supply Connection

- Use a wire of AWG22 (0.3 mm²). Use a wire of AWG20 (0.5 mm²) for **CVD242**, **CVD245**, **CVD528** and **CVD538**.
- Incorrect polarities of the DC power-supply input will damage the driver. Make sure that the polarity is correct before turning the power on.

◆ Motor Cable Extension

- Use a wire of AWG22 (0.3 mm²) min. Use a wire of AWG20 (0.5 mm²) min. for **CVD242**, **CVD245**, **CVD528** and **CVD538**.

◆ General

- A separate hand crimp tool is required to crimp the connector and lead wires included with the driver. Connection cables which are available as accessories (sold separately) have already had their lead wires crimped.
- If a specific wiring and layout causes the motor cable or power supply cable to generate a noise problem, shield the cable or use ferrite cores.

Orientalmotor

These products are manufactured at plants certified with the international standards **ISO 9001** (for quality assurance) and **ISO 14001** for systems of environmental management).

Specifications are subject to change without notice. This catalogue was published in January 2024.

ORIENTAL MOTOR (EUROPA) GmbH

European Headquarters

Schießstraße 44
40549 Düsseldorf, Germany
Tel: 0211 5206700 Fax: 0211 52067099

Spanish Office

Ronda de Poniente 2, Ed. 12, 2ª planta
28109 Tres Cantos (Madrid), Spain
Tel: +34 919 61 06 76

ORIENTAL MOTOR (UK) LTD.

UK Headquarters

Unit 5, Faraday Office Park,
Rankine Road, Basingstoke,
Hampshire RG24 8AH, U.K.
Tel: +44 1256 347090 Fax: +44 1256 347099

ORIENTAL MOTOR ITALIA s.r.l.

Italy Headquarters

Via XXV Aprile 5
20016 Pero (MI), Italy
Tel: +39 2 93906346 Fax: +39 2 93906348

ORIENTAL MOTOR (FRANCE) SARL

France Headquarters

56, Rue des Hautes Pâtures
92000 Nanterre, France
Tel: +33 1 47 86 97 50 Fax: +33 1 47 82 45 16

Customer Service Center

(Support in German & English)

00800 22 55 66 22*

Mon - Thu: 08:00 - 16:30 CET

Friday: 08:00 - 15:00 CET

*Free Call Europe

info@orientalmotor.de



WWW.ORIENTALMOTOR.EU

EN | DE | UK | IT | FR | ES